

# 3RD FUNCTION VALVES

	Part #	Kit Description	Tractor(s)
BX 3rd FUNCTION VALVE KITS	380-289A	3FVK PC BX2680	BX1880, BX2380 & BX2680 ALL MODELS
			BX235 ALL MODELS
	380-339A	3FVK FF BX2680	BX1880, BX2380 & BX2680 ALL MODELS
			BX235 ALL MODELS
	380-137A	3FVK PC BX2670	BX1860 ALL MODELS
			BX2360 & BX2660 ALL MODELS
			BX1870 ALL MODELS
			BX2370 & BX2670 ALL MODELS
	380-337A	3FVK FF BX2670	BX25D ALL MODELS
			BX1860 ALL MODELS
			BX2360 & BX2660 ALL MODELS
			BX1870 ALL MODELS
B 3rd FUNCTION VALVE KITS	380-149A	3FVK PC B2601	BX2370 & BX2670 ALL MODELS
			BX25D ALL MODELS
			B2320 ALL MODELS
	380-340A	3FVK FF B2601	B2620 ALL MODELS
			B2301 & B2601 ALL MODELS
			B2320 ALL MODELS
	380-168A	3FVK PC B3350	B2650 & B3350 ALL MODELS
	380-335A	3FVK FF B3350	B2650 & B3350 ALL MODELS
380-093A	3FVK PC B3300	B3300 ALL MODELS	
380-333A	3FVK FF B3300	B3300 ALL MODELS	
L 3rd FUNCTION VALVE KITS	380-152A	3FVK PC L4701	L2501, L3301 & L3901 ALL MODELS
			L3200 & L3800 ALL MODELS
			L4600 ALL MODELS
	380-336A	3FVK FF L4701	L4701 ALL MODELS
			L2501, L3301 & L3901 ALL MODELS
			L3200 & L3800 ALL MODELS
MX 3rd FUNCTION VALVE KITS	380-311A	3FVK FF MX6000 CAB	MX5400 & MX6000 WITH CAB
	380-312A	3FVK FF MX6000 ROPS	MX5400 & MX6000 WITH ROPS
	380-330A	3FVK PC MX6000 CAB	MX5400 & MX6000 WITH CAB
	380-331A	3FVK PC MX6000 ROPS	MX5400 & MX6000 WITH ROPS
	380-166A	3FVK PC MX5800	MX4700 & MX5100 ALL MODELS
			MX4800, MX5200 & MX5800 ALL MODELS
	380-334A	3FVK FF MX5800	MX4700 & MX5100 ALL MODELS MX4800, MX5200 & MX5800 ALL MODELS

