

Hour Meter Option Assembly Instructions



ZR44 & ZR52 Mowers

Manual No. 356-109M

Before You Start



When you see this symbol, the subsequent instructions and warnings are serious - follow without exception. Your life and the lives of others depend on it!

IMPORTANT: Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

Your Hour Meter Option is exclusively designed for your Land Pride ZR44 & ZR52 Mower. Please read these installation instructions and your ZR44 & ZR52 Mower Operator's Manual thoroughly before beginning. Especially read information relating to safety concerns. Also included in the Operator's Manual is important information on operation, adjustment, troubleshooting, and maintenance for this attachment (some manual sections do not apply to all accessories).

General Information

These assembly instructions apply to the following Hour Meter Option Accessories listed below:

356-108A HOUR METER/WIRE HARNESS-RAZOR

Further Assistance

Your dealer wants you to be satisfied with your new Hour Meter Option. If for any reason you do not understand any part of this manual or are not satisfied with the service received, the following actions are suggested:

1. Discuss the matter with your dealership service manager making sure he is aware of any problems you may have and that he has had the opportunity to assist you.
2. If you are still not satisfied, seek out the owner or general manager of the dealership, explain the problem and request assistance.
3. For further assistance write to:

Land Pride Service Department
1525 East North Street
P.O. Box 5060
Salina, Ks. 67402-5060


E-mail address
lpservicedept@landpride.com

Assembly Instructions

1. Park the tractor on a flat surface, set park brake, shut-off engine, and remove ignition switch key. Disconnect the negative battery cable.

Refer to Figure 1

2. Using a hammer and punch, remove the notched hour meter tab on the tractor.

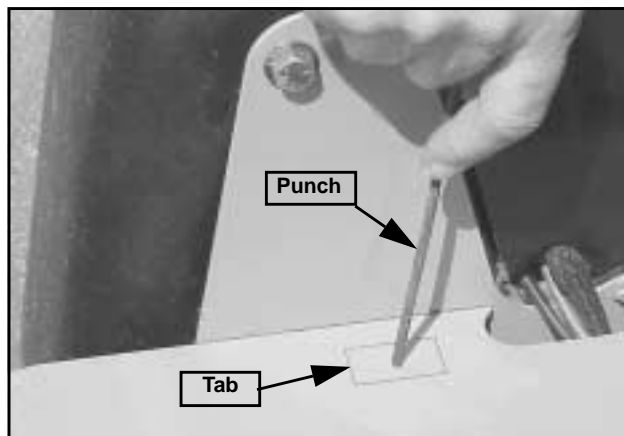


20882

Figure 1
Tab Removal

Refer to Figure 2

3. Locate the wire harness accessory connector on the right side of the tractor. Disconnect the male connector from it.

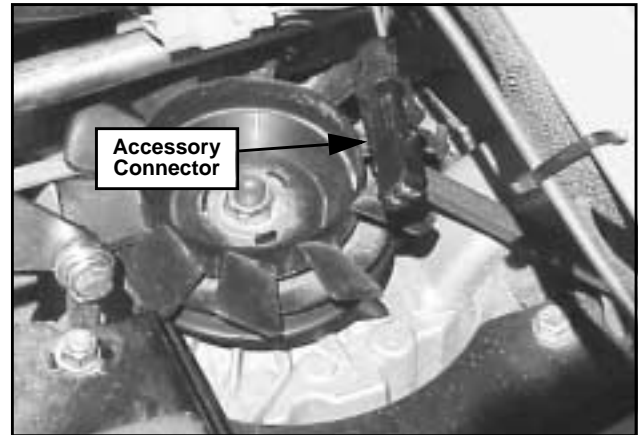


20884

Figure 2
Wire Harness Accessory Connector

Refer to Figure 3

4. Remove the two terminal plugs inside the male connector.

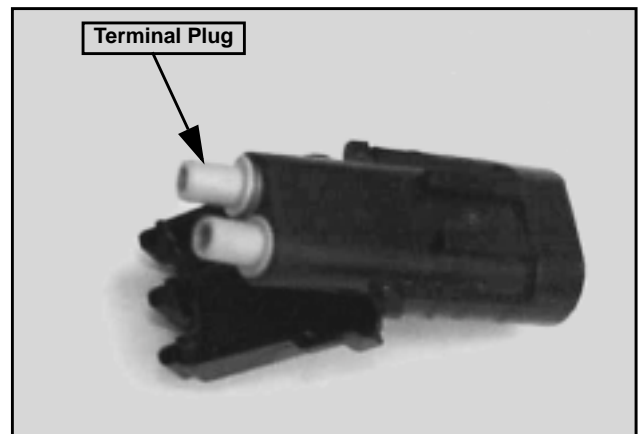


20886

Figure 3
Terminal Plugs

Refer to Figure 4

5. Insert the hour meter wire harness connectors into the male connector. Insert the orange wire on the hour meter wire harness into the "A" terminal on the end connector and the black wire into the "B" terminal. Plug the hour meter wire harness onto the hour meter. It does not matter which wire is connected to the terminals on the hour meter.

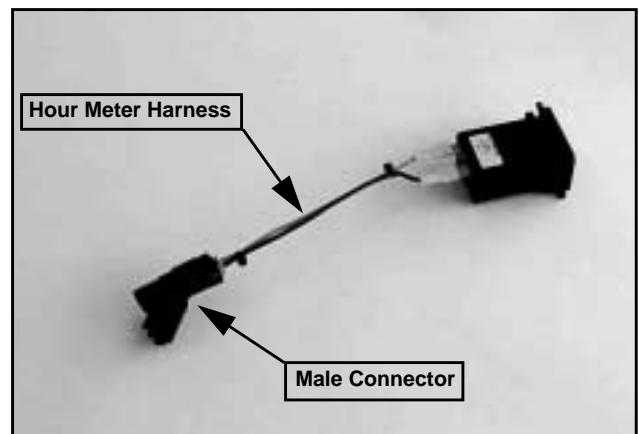

20883

Figure 4
Connecting Wires

Refer to Figure 5

6. Insert the hour meter into the slot and place the mounting bracket on the underneath side to lock in place. Plug the male connector into the wire harness accessory connector.
7. Re-attach the negative battery cable. The unit is now ready to operate.



20887

Figure 5
Connecting Harness

356-108A HOUR METER/WIRE HARNESS-RAZOR

Your kit includes:

Qty.	Part No.	Part Description
1	356-109M	MANUAL HOUR METER KIT - RAZOR
1	833-352C	HOUR METER
1	839-306C	WIRE HARNESS HOUR METER-RAZOR



Corporate Office: P.O. Box 5060
Salina, Kansas 67402-5060 USA
www.landpride.com
