

# Camo Canopy Cover Assembly Instructions



4200/4400 NT/ST and 4210/4410 ST Series

Manual No. 701-124M

## Before You Start



When you see this symbol, the subsequent instructions and warnings are serious - follow without exception. Your life and the lives of others depend on it!

**IMPORTANT:** Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

**IMPORTANT:** It is absolutely essential that you remove the soft canopy cover prior to transporting the vehicle on a trailer or hauling it on another vehicle at highway speeds. Not removing the cover may result in losing the cover from being blown off.

Your Land Pride Camo Canopy Cover is exclusively designed for your Land Pride Treker fiberglass canopy. Please read these installation instructions and the vehicle Operator's Manual thoroughly before beginning. Especially read information relating to safety concerns. Also included in the Operator's Manual is important information on operation, adjustment, troubleshooting, and maintenance for this attachment (some manual sections do not apply to all accessories).

A separate Parts Manual for replacement parts can be purchased from your dealer or available free of charge at [www.landpride.com](http://www.landpride.com). Have model and serial numbers handy when placing an order.

### Manual Part Numbers:

- Operator's Manual (All NT & ST Series) . . . 700-108M
- Parts Manual (4200/4400 NT/ST Series) . . . 700-108P
- Parts Manual (4210/4410 ST Series) . . . . 700-109P

## General Information

These assembly instructions apply to the following Camo Canopy Covers listed below:

- 701-116A NT CANVAS CAMO CVR,FBGL CNP TP
- 701-117A ST CANVAS CAMO CVR,FBGL CNP TP

### Tools required:

- Soft Cotton Cleaning Rags
- Mild Detergent

## Assembly Instructions

Please contact your local Land Pride dealer for any missing components.

## Initial Preparations

Before servicing the vehicle the following procedure must be met to secure the vehicle:

1. Park vehicle on a level surface. **Don't work under or around a vehicle parked on an incline.**
2. Make the following gear and park brake selections:
  - a. **4200/4400 NT & ST Trekers:**
    - Set shift selector in forward gear.
    - Set park brake.
  - b. **4210ST & 4410ST Trekers.**
    - Set shift selector in Park.
3. Turn ignition switch off and remove switch key.
4. Chock front and back of a wheel to prevent the vehicle from rolling.



Figure 1

Refer to Figure 1:

5. Clean canopy top with mild detergent and dry completely.



Figure 2

Refer to Figure 2:

6. Cut Hook & Loop material to length and width of canopy edge. Apply to edges of canopy, pressing firmly to secure in place.

## Assembly Instructions

---

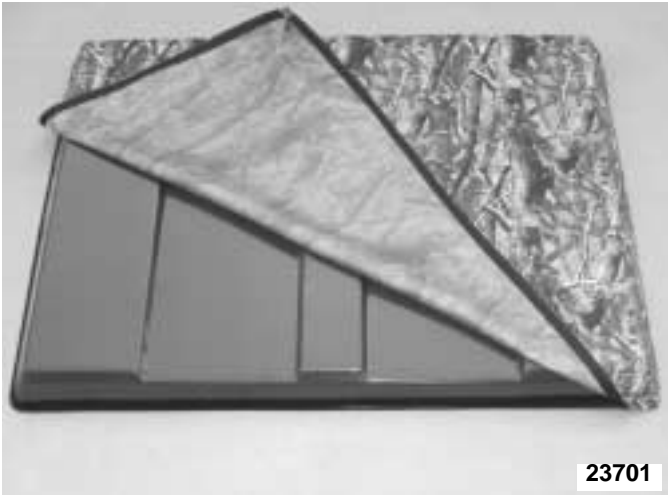


Figure 3

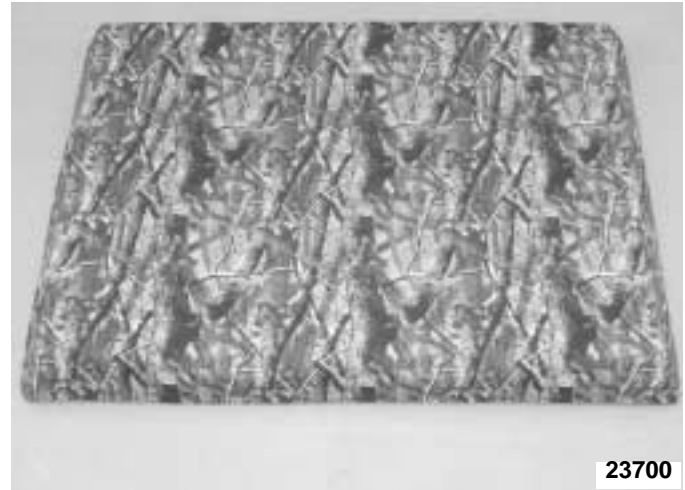


Figure 4

**Refer to Figure 3 & Figure 4:**

7. Attach canopy cover by adhering Hook & Loop material on underside of canopy cover to snap on canopy edges. Press firmly to secure canopy cover to the canopy.



Corporate Office: P.O. Box 5060  
Salina, Kansas 67402-5060 USA  
[www.landpride.com](http://www.landpride.com)